 


## Tapper installation guide

### Pay close attention to the tapper ports.

If the tapper is not installed correctly, it will not work properly.

B- Far away antenna



A - Near antenna

6dB loss



Repeater


After the repeater, a maximum of 2 tappers can be used.

## Tapper installation guide

### Pay close attention to the tapper ports.

If the tapper is not installed correctly, it will not work properly.

B- Far away antenna

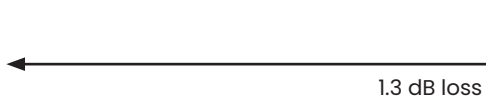

A - Near antenna

6dB loss



Repeater

After the repeater, a maximum of 2 tappers can be used.

## Tapper installation guide

### Pay close attention to the tapper ports.

If the tapper is not installed correctly, it will not work properly.

B- Far away antenna



A - Near antenna

6dB loss



Repeater

After the repeater, a maximum of 2 tappers can be used.